# **Senergy**®

# Sentry Stucco Ultra Wall System

Premium Impact and Puncture Resistant, Rain Screen Design Cement Plaster Stucco System with Enhanced Water Management Typical Details





### **Typical Details**

#### **TABLE OF CONTENTS**

- 1. Typical Sentry Stucco Ultra Wall System with Steel Framing
- 2. Typical Sentry Stucco Ultra Wall System with Wood Framing
- 3. Typical Sentry Stucco Ultra Wall System with CMU
- 4. Typical Surface Control Joint
- 5. Typical Expansion Joint
- 6. Typical Drainage at Floorline
- 7. Typical Clad Window Jamb
- 8. Typical Clad Window Head
- 9. Typical Clad Window Sill
- 10. Typical Primed Window Head
- 11. Typical Primed Window Jamb
- 12. Typical Primed Window Sill

- 13. Typical EPS Shape Application
- 14. Typical Termination at Soffit / Gable End
- 15. Typical Termination at Foundation
- 16. Typical Kick-out Flashing
- 17. Typical Termination at Deck
- 18. Typical Coping
- 19. Typical Corner Bead
- 20. Typical Downspout Application
- 21. Typical Pipe Penetration
- 22. Typical Light Fixture
- 23. Typical Dryer Vent


#### Notes:

- Install Master Builders Solutions materials in accordance with current installation instructions.
- Unsatisfactory conditions shall be reported to the General Contractor and corrected before the application of Master Builders Solutions products.
- The details within represent Master Builders Solutions Construction Systems US, LLC (hereinafter Master Builders Solutions) latest recommendations. They are presented in good faith by Master Builders Solutions. The details are subject to change without notice. Master Builders Solutions accepts no liability for the end use of the details. For conditions not shown, consult Master Builders Solutions for review of specific detail.





#### TYPICAL SENTRY STUCCO ULTRA WALL SYSTEM WITH STEEL FRAMING

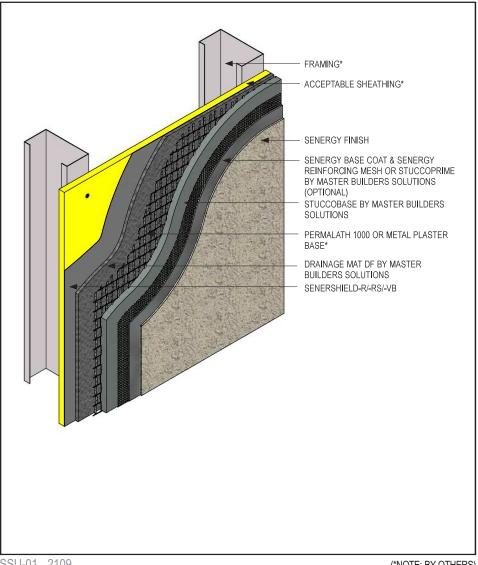


- · Install all materials in accordance with installation instructions and applicable
- · Ensure Senershield-R/-RS/-VB is dry prior to Drainage Mat DF installation.
- · Install Drainage Mat DF with the fabric side facing out.

SSU-01 2109 (\*NOTE: BY OTHERS)



#### TYPICAL SENTRY STUCCO ULTRA WALL SYSTEM WITH WOOD FRAMING

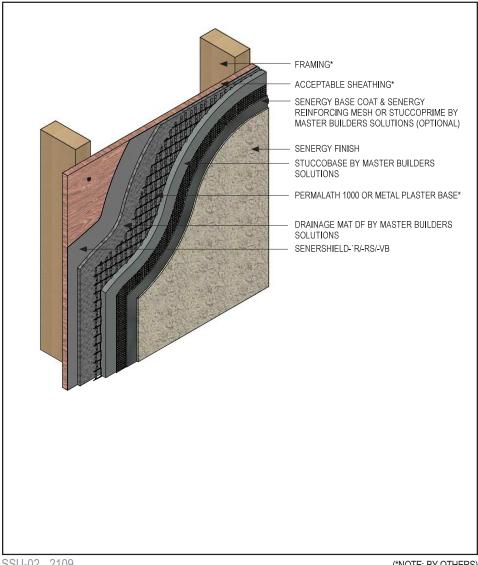


- · Install all materials in accordance with installation instructions and applicable
- · Wood based sheathing requires two coats of Senershield-R/-RS/-VB. It can be sprayed to a 20-mil thickness in one wet application.
- · Ensure Senershield-R/-RS/-VB is dry prior to Drainage Mat DF installation.
- · Install Drainage Mat DF with the fabric side facing out.

SSU-02 2109 (\*NOTE: BY OTHERS)



#### TYPICAL SENTRY STUCCO ULTRA WALL SYSTEM WITH CMU

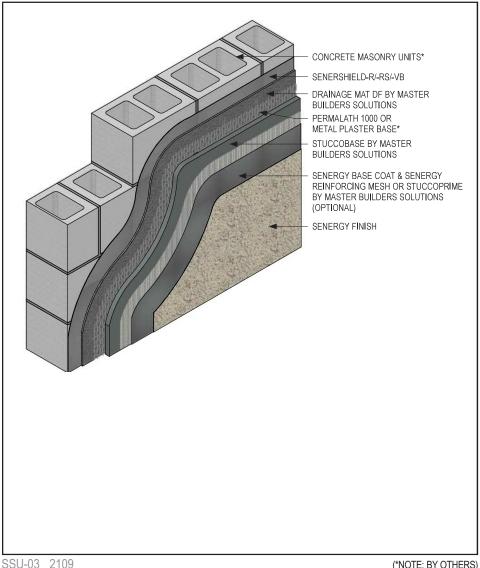


- · Install all materials in accordance with installation instructions and applicable
- · Multiple coats of Senershield-R/-RS/-VB may be required to achieve a pin-hole free application.
- Ensure Senershield-R/-RS/-VB is dry prior to Drainage Mat DF installation.
- · Install Drainage Mat DF with the fabric side facing out.

(\*NOTE: BY OTHERS)



#### TYPICAL SURFACE CONTROL JOINT

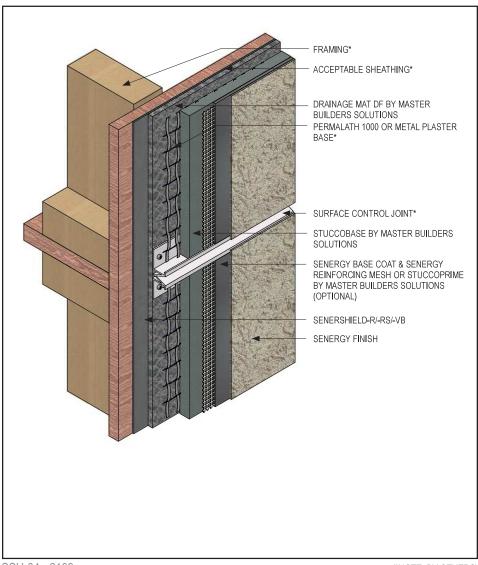


- Install all materials in accordance with installation instructions and applicable code
- Provide control joints at a maximum 144 sq. ft. (13.4 sq. m.) and placement as determined by the design professional.
- · Install per requirements of ASTM C1063.
- Lath must be broken at the joint accessory.

SSU-04 2109 (\*NOTE: BY OTHERS)



#### TYPICAL EXPANSION JOINT

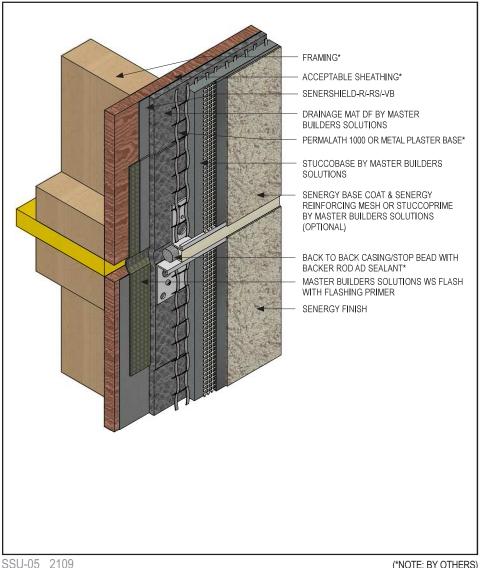


- · Install all materials in accordance with installation instructions and applicable
- · Install expansion joints in the system at all changes in substrate, through existing expansion joints, and where movement is anticipated. It is the sole responsibility of the design professional to determine specific expansion joint location, placement and design.
- Install per requirements of ASTM C1063.
- · Lath must be broken at the joint accessory.

(\*NOTE: BY OTHERS)



#### TYPICAL DRAINAGE AT FLOORLINE

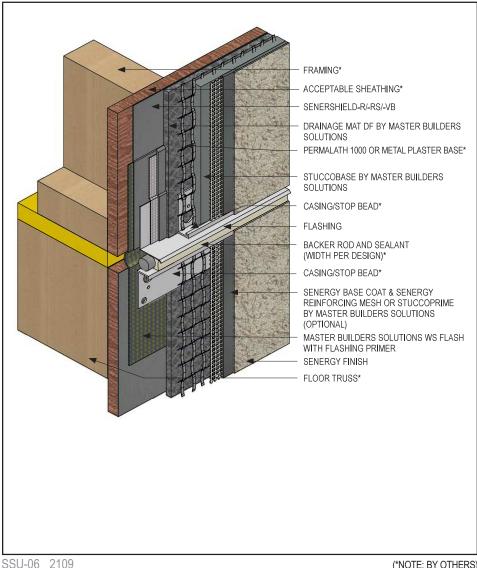


- · Install all materials in accordance with installation instructions and applicable
- Senershield-R/-RS/-VB shall be installed over flashing.
- · Provide end-dams at flashing terminations as required.
- · Lath must be broken at the joint accessory.
- It is recommended that a means for drainage is provided at every floor.

(\*NOTE: BY OTHERS)




#### TYPICAL CLAD WINDOW - JAMB

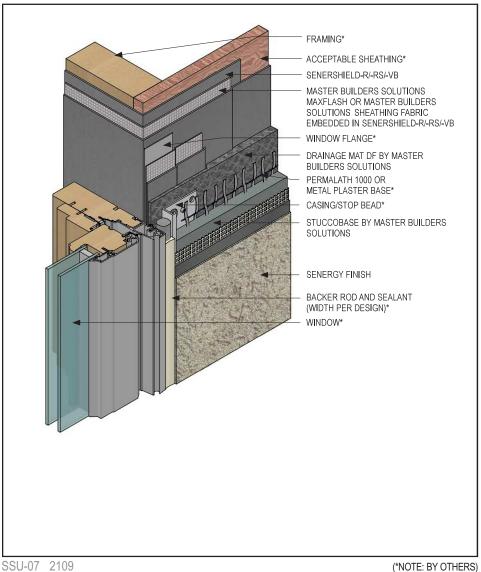

- · Install all materials in accordance with installation instructions and applicable
- Ensure Senershield-R/-RS/-VB is properly applied into the rough openings in accordance with application quidelines. See Air/Water-Resistive/ Vapor Barrier Application Guidelines technical bulletin.



#### TYPICAL CLAD WINDOW - HEAD

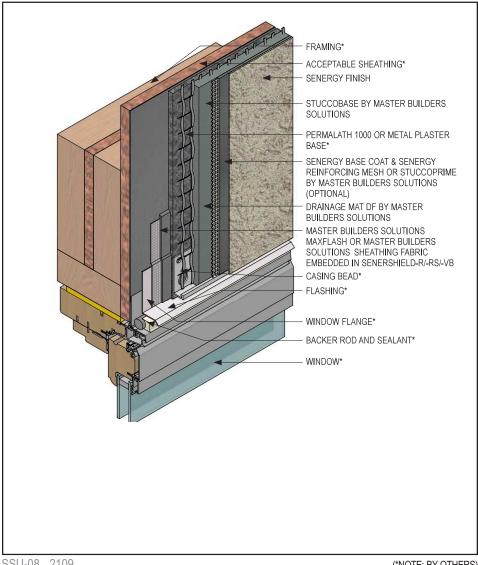


- · Install all materials in accordance with installation instructions and applicable
- Ensure Senershield-R/-RS/-VB is properly applied over the head flashing.
- · Provide end-dams at flashing terminations.

SSU-08 2109 (\*NOTE: BY OTHERS)




#### TYPICAL CLAD WINDOW - SILL

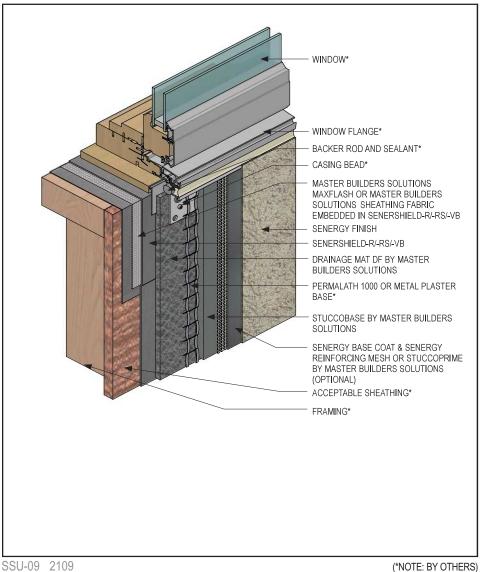

- · Install all materials in accordance with installation instructions and applicable
- Ensure Senershield-R/-RS/-VB is properly applied into the rough openings in accordance with application guidelines. See Air/Water-Resistive/ Vapor Barrier Application Guidelines technical bulletin.



#### TYPICAL PRIMED WINDOW - HEAD

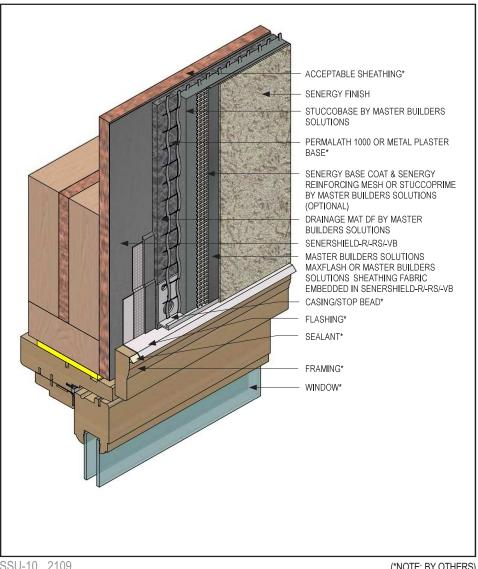


- · Install all materials in accordance with installation instructions and applicable
- Ensure Senershield-R/-RS/-VB is properly applied over the head flashing.
- · Provide end-dams at flashing terminations.

SSU-10 2109 (\*NOTE: BY OTHERS)



#### TYPICAL PRIMED WINDOW - JAMB

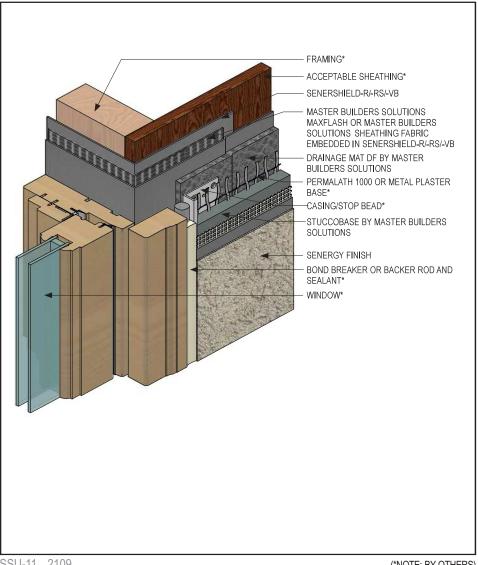


- · Install all materials in accordance with installation instructions and applicable
- Ensure Senershield-R/-RS/-VB is properly applied into the rough openings.

SSU-11 2109 (\*NOTE: BY OTHERS)



#### TYPICAL PRIMED WINDOW - SILL

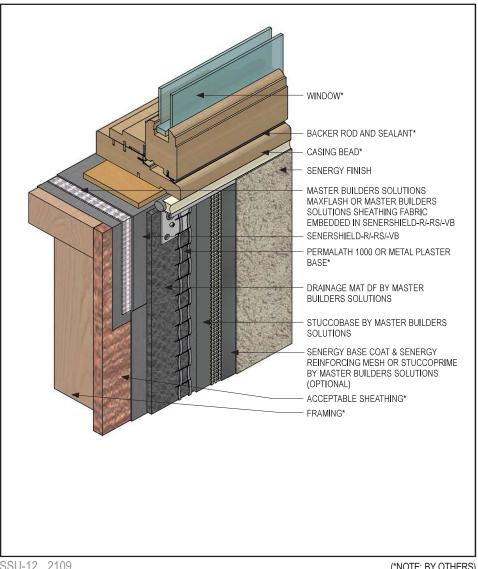


- · Install all materials in accordance with installation instructions and applicable
- Ensure Senershield-R/-RS/-VB is properly applied into the rough openings in accordance with application guidelines. See Air/Water-Resistive/ Vapor Barrier Application Guidelines technical bulletin.

SSU-12 2109 (\*NOTE: BY OTHERS)



#### TYPICAL EPS SHAPE APPLICATION

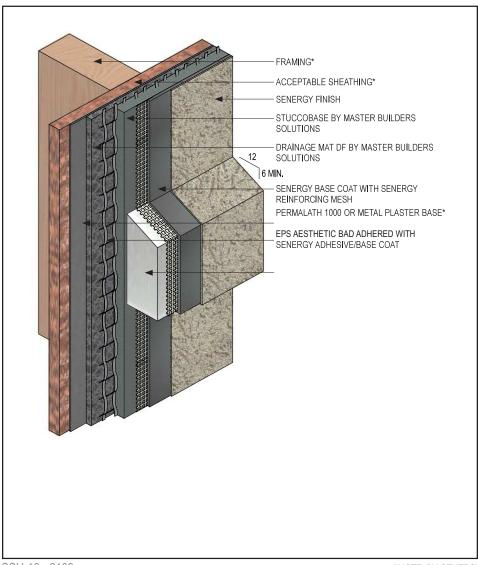


- Install all materials in accordance with installation instructions and applicable code.
- Overlap reinforced base coat onto Master Builders Solutions StuccoBase a minimum of 3" (76 mm).
- On horizontal projections greater than one inch maintain a minimum 6:12 slope.

SSU-13 2109 (\*NOTE: BY OTHERS)



#### TYPICAL TERMINATION AT SOFFIT / GABLE END

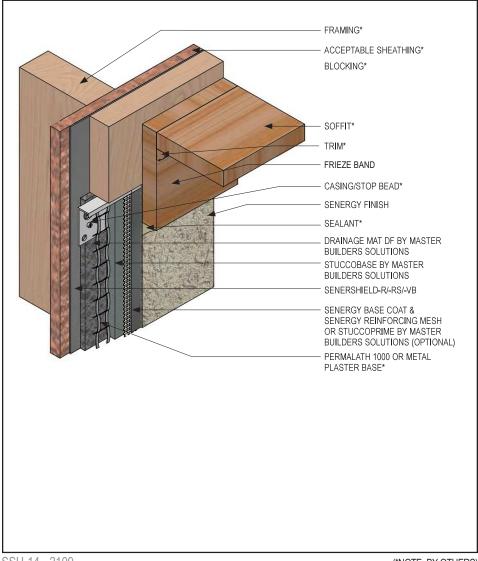


- · Install all materials in accordance with installation instructions and applicable
- · Lap frieze band a minimum of 2" (50 mm) over the Sentry Stucco Ultra Wall System.

SSU-14 2109 (\*NOTE: BY OTHERS)



#### TYPICAL TERMINATION AT FOUNDATION

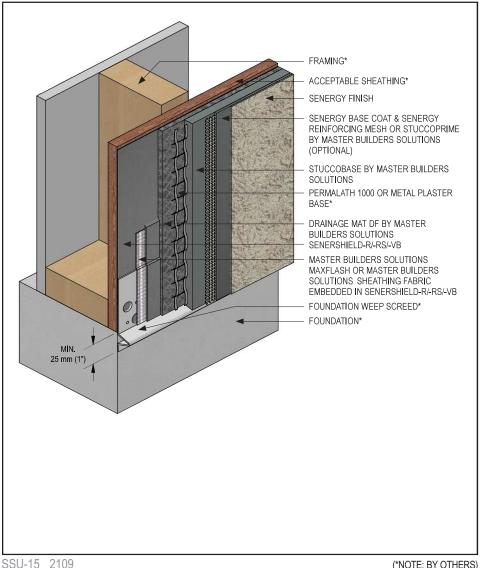


- · Install all materials in accordance with installation instructions and applicable
- Per ASTM C1063 terminate the stucco wall system a minimum of 4" (100 mm) above raw earth and 2" (50 mm) above paved surface.
- · Senershield-R/-RS/-VB shall be installed over weep screed flange.

(\*NOTE: BY OTHERS)



#### TYPICAL KICK-OUT FLASHING

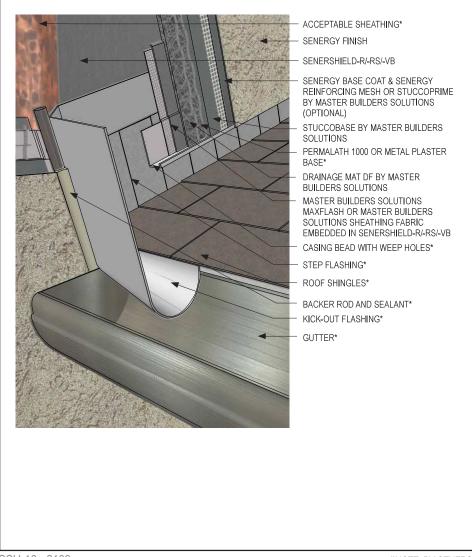


- · Install all materials in accordance with installation instructions and applicable
- Terminate Sentry Stucco Ultra Wall System a minimum of 2" (50 mm) above
- Ensure step flashing is a minimum 2" (50 mm) behind Sentry Stucco Ultra Wall System.
- · Kick-out flashing a minimum 4" (100 mm) in height.
- · Kick-out flashing shall be angled a minimum 100° with seams sealed or
- · Ensure a means for drainage is provided at system termination at roof.

SSU-16 2109 (\*NOTE: BY OTHERS)



#### TYPICAL TERMINATION AT DECK

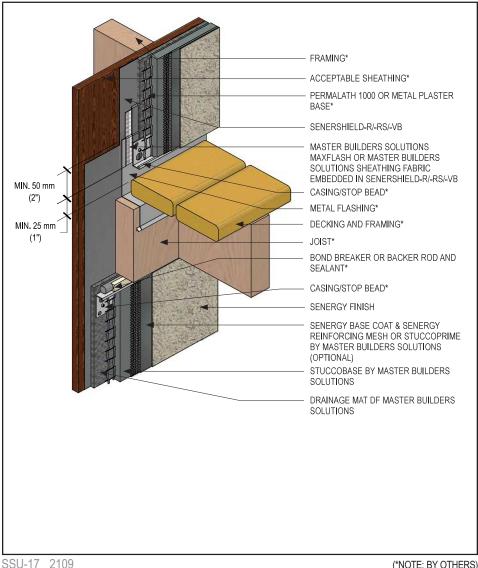


- · Install all materials in accordance with installation instructions and applicable
- · Senershield-R/-RS/-VB shall be installed over flashing.
- Senershield-R/-RS/-VB shall be installed up and behind metal flashing before terminating.
- · Provide end-dams at flashing terminations as required.

(\*NOTE: BY OTHERS)



### TYPICAL TYPICAL COPING

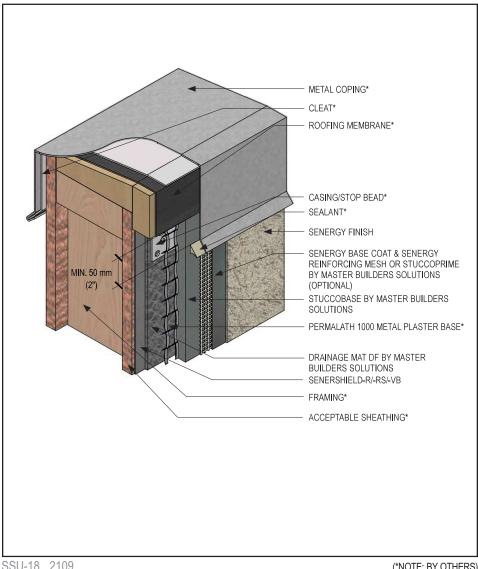


- · Install all materials in accordance with installation instructions and applicable
- Extend coping a minimum of 2" (50 mm) on to face of Sentry Stucco Ultra Wall System and seal drip edge.
- Senershield-R/-RS/-VB shall be installed up and over the top and extended down the other side.

SSU-18 2109 (\*NOTE: BY OTHERS)



#### TYPICAL CORNER BEAD

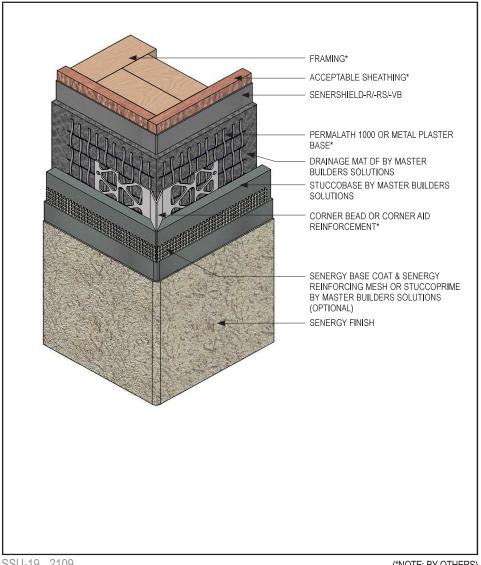


- · Install all materials in accordance with installation instructions and applicable
- · Attach corner bead over lath.
- · Corner bead shall be filled solid with Master Builders Solutions StuccoBase, as required.

SSU-19 2109 (\*NOTE: BY OTHERS)




### TYPICAL DOWNSPOUT APPLICATION

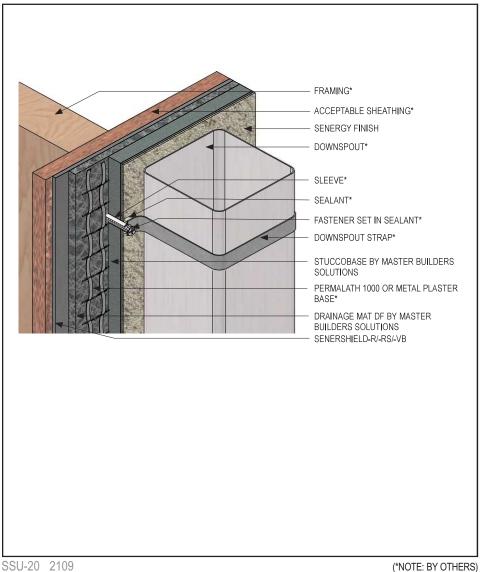

- · Install all materials in accordance with installation instructions and applicable
- · Properly seal all penetrations through the Sentry Stucco Ultra Wall System.



#### TYPICAL PIPE PENETRATION

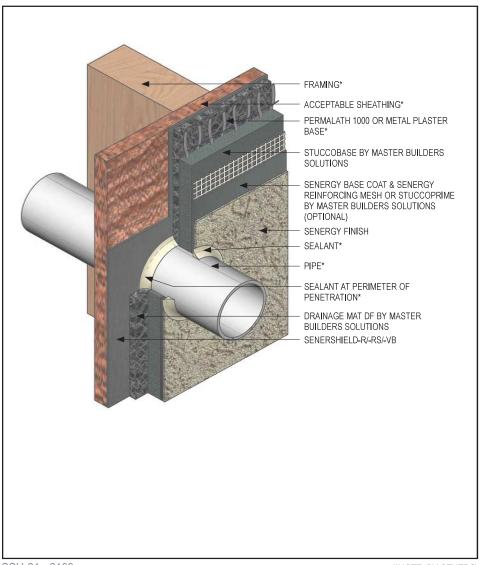


- Install all materials in accordance with installation instructions and applicable code.
- Properly seal all penetrations through the Sentry Stucco Ultra Wall System.

SSU-21 2109 (\*NOTE: BY OTHERS)



#### TYPICAL LIGHT FIXTURE

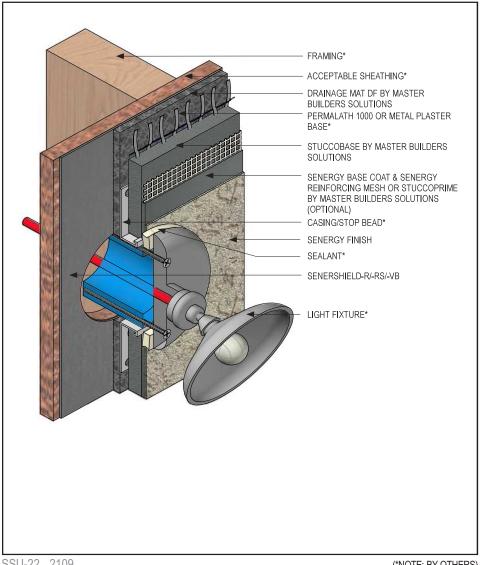


- · Install all materials in accordance with installation instructions and applicable
- · Properly seal all penetrations through the Sentry Stucco Ultra Wall System.

SSU-22 2109 (\*NOTE: BY OTHERS)



### TYPICAL DRYER VENT

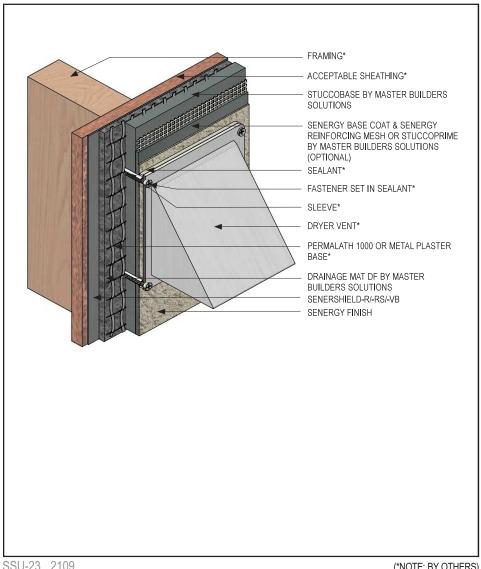

- · Install all materials in accordance with installation instructions and applicable
- · Properly seal all penetrations through the Sentry Stucco Ultra Wall System.

SSU-23 2109 (\*NOTE: BY OTHERS)

#### Warranty

Master Builders Solutions Construction Systems US, LLC ("Master Builders") warrants this product to be free from manufacturing defects and to meet the technical properties on the current Technical Data Guide, if used as directed within shelf life. Satisfactory results depend not only on quality products but also upon many factors beyond our control. Master Builders MAKES NO OTHER WARRANTY OR GUARANTEE, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE WITH RESPECT TO ITS PRODUCTS. The sole and exclusive remedy of Purchaser for any claim concerning this product, including but not limited to, claims alleging breach of warranty, negligence, strict liability or otherwise, is shipment to purchaser of product equal to the amount of product that fails to meet this warranty or refund of the original purchase price of product that fails to meet this warranty, at the sole option of Master Builders. Any claims concerning this product must be received in writing within one (1) year from the date of shipment and any claims not presented within that period are waived by Purchaser. Master Builders WILL NOT BE RESPONSIBLE FOR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL (INCLUDING LOST PROFITS) OR PUNITIVE DAMAGES OF ANY KIND.

Purchaser must determine the suitability of the products for the intended use and assumes all risks and liabilities in connection therewith. This information and all further technical advice are based on Master Builders' present knowledge and experience. However, Master Builders assumes no liability for providing such information and advice including the extent to which such information and advice may relate to existing third party intellectual property rights, especially patent rights, nor shall any legal relationship be created by or arise from the provision of such information and advice. Master Builders reserves the right to make any changes according to technological progress or further developments. The Purchaser of the Product(s) must test the product(s) for suitability for the intended application and purpose before proceeding with a full application of the product(s). Performance of the product described herein should be verified by testing and carried out by qualified experts.

For professional use only. Not for sale to or use by the general public.

For the most current version of this literature, please visit our website at senergy.master-builders-solutions.com/en. 
 Customer Service
 +1 (800) 433-9517

 Technical Service
 +1 (800) 589-1336
Master Builders Solutions Construction Systems US, LLC 889 Valley Park Drive, Shakopee, MN 55379 senergy.master-builders-solutions.com/en