



MasterSeal[®] AWB 900 Liquid Flashing Membrane

Typical Details for Framed and Masonry/Concrete Construction Incorporating MasterSeal AWB 900 Liquid Flashing Membrane


TABLE OF CONTENTS

- 2. Typical Joint and Fastener Treatment
- **3.** Typical Rough Opening Treatment with MasterSeal AWB 900 on Masonry Construction without Buck
- 4. Typical Rough Opening Treatment with MasterSeal AWB 900 on Framed Construction without Buck
- 5. Typical Rough Opening Treatment with MasterSeal AWB 900 on Masonry Construction with Flushed Buck
- 6. Typical Rough Opening Treatment with MasterSeal AWB 900 on Framed Construction with Flushed Buck
- 7. Typical Rough Opening Treatment with MasterSeal AWB 900 on Masonry Construction with a Recessed Buck

- **8.** Typical Rough Opening Treatment with MasterSeal AWB 900 on Framed Construction with a Recessed Buck
- **9.** Typical Rough Opening Treatment with MasterSeal AWB 900 on Masonry Construction with a Protruding Buck
- **10.** Typical Rough Opening Treatment with MasterSeal AWB 900 on Framed Construction with a Protruding Buck
- **11.** Typical Termination at Grade
- 12. Typical Pipe Penetration
- 13. Typical Sheathing Joint Inside Corner
- 14. Typical Sheathing Joint Outside Corner




TYPICAL JOINT AND FASTENER TREATMENT

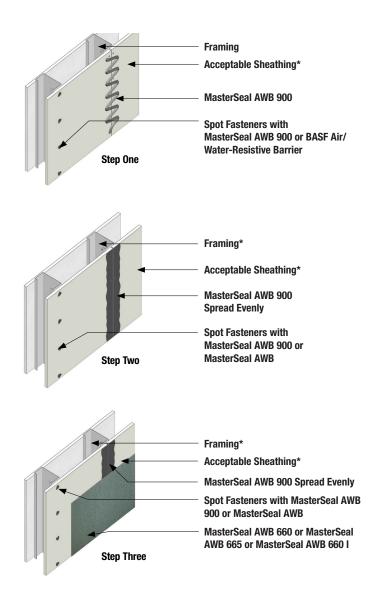


- Ensure that MasterSeal AWB 900 is applied at a 20 mil thickness.
- Extend MasterSeal AWB 900 at least 25 mm (1") on either side of sheathing joints.
- Allow MasterSeal AWB 900 to skin before applying fluid-applied air/water resistive barrier.

TYPICAL ROUGH OPENING TREATMENT WITH MAXFLASH ON MASONRY OR CONCRETE CONSTRUCTION WITHOUT BUCK

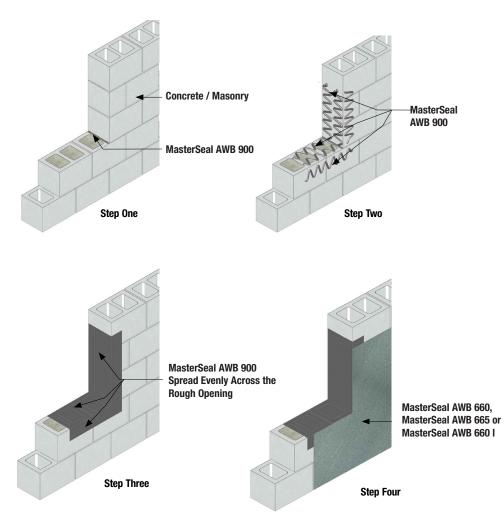


- Ensure that MasterSeal AWB 900 is uniformly applied at a 12-20 mil thickness.
- Extend MasterSeal AWB 900 at least 100 mm (4") onto the exterior wall, maintaining 12-20 mil thickness.
- Allow MasterSeal AWB 900 to skin before applying fluid-applied air/ water resistive barrier.
- Lap air/water-resistive barrier at least 50 mm (2") onto MasterSeal AWB 900, creating a continuous, monolithic air/ water resistive barrier

TYPICAL ROUGH OPENING TREATMENT WITH MASTERSEAL AWB 900 ON FRAMED CONSTRUCTION WITHOUT BUCK

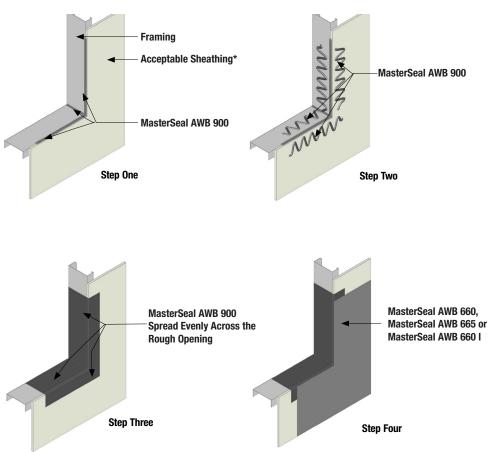


- Ensure that MasterSeal AWB 900 is uniformly applied at a 12-20 mil thickness.
- Extend MasterSeal AWB 900 at least 100 mm (4") onto the exterior wall, maintaining 12-20 mil thickness.
- Allow MasterSeal AWB 900 to skin before applying fluid-applied air/ water resistive barrier.
- Lap air/water-resistive barrier at least 50 mm (2") onto MasterSeal AWB 900, creating a continuous, monolithic air/ water resistive barrier

TYPICAL JOINT AND FASTENER TREATMENT

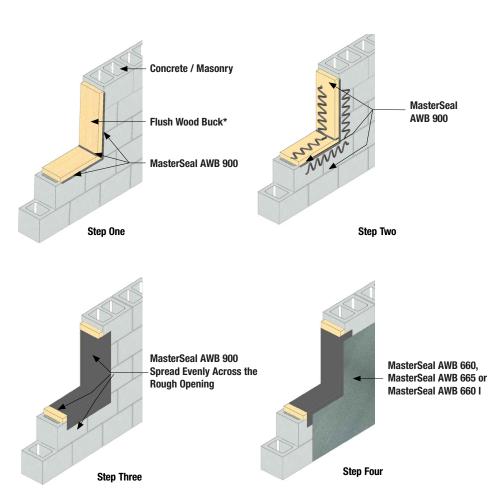


- Ensure that MasterSeal AWB 900 is uniformly applied at a 12-20 mil thickness.
- Extend MasterSeal AWB 900 at least 100 mm (4") onto the exterior wall, maintaining 12-20 mil thickness.
- Allow MasterSeal AWB 900 to skin before applying fluid-applied air/ water resistive barrier.
- Lap air/water-resistive barrier at least 50 mm (2") onto MasterSeal AWB 900, creating a continuous, monolithic air/ water resistive barrier

TYPICAL ROUGH OPENING TREATMENT WITH MASTERSEAL AWB 900 ON FRAMED CONSTRUCTION WITH FLUSH BUCK

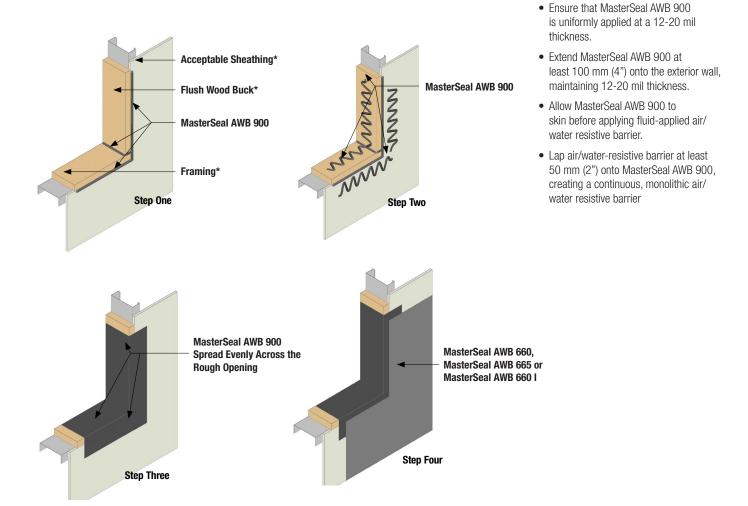


TYPICAL ROUGH OPENING TREATMENT WITH MASTERSEAL AWB 900 ON MASONRY OR CONCRETE CONSTRUCTION WITH A RECESSED BUCK

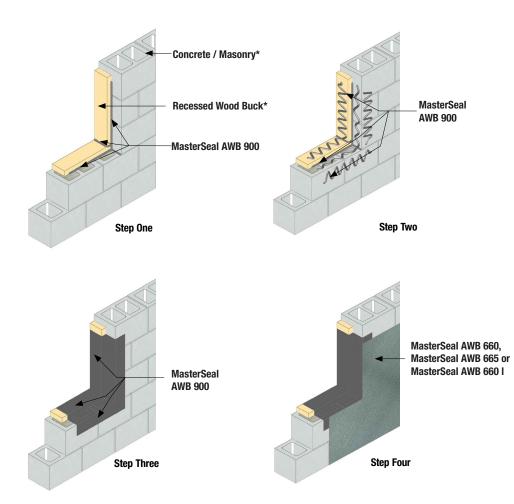

- Ensure that MasterSeal AWB 900 is uniformly applied at a 12-20 mil thickness.
- Extend MasterSeal AWB 900 at least 100 mm (4") onto the exterior wall, maintaining 12-20 mil thickness.
- Allow MasterSeal AWB 900 to skin before applying fluid-applied air/ water resistive barrier.
- Lap air/water-resistive barrier at least 50 mm (2") onto MasterSeal AWB 900, creating a continuous, monolithic air/ water resistive barrier

TYPICAL ROUGH OPENING TREATMENT WITH MASTERSEAL AWB 900 ON FRAMED CONSTRUCTION WITH A RECESSED BUCK

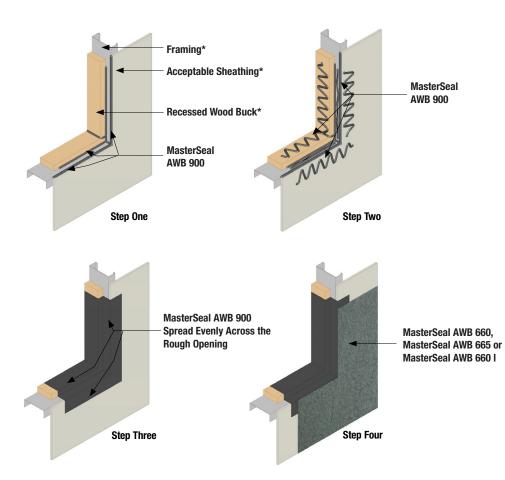


- Ensure that MasterSeal AWB 900 is uniformly applied at a 12-20 mil thickness.
- Extend MasterSeal AWB 900 at least 100 mm (4") onto the exterior wall, maintaining 12-20 mil thickness.
- Allow MasterSeal AWB 900 to skin before applying fluid-applied air/ water resistive barrier.
- Lap air/water-resistive barrier at least 50 mm (2") onto MasterSeal AWB 900, creating a continuous, monolithic air/ water resistive barrier

Technical Bulletin Typical Details for Framed and Masonry/Concrete Construction Incorporating MasterSeal AWB 900 Liquid Flashing Membrane


MasterSeal AWB 900 Liquid Flashing Membrane

TYPICAL ROUGH OPENING TREATMENT WITH MASTERSEAL AWB 900 ON MASONRY OR CONCRETE CONSTRUCTION WITH A PROTRUDING BUCK

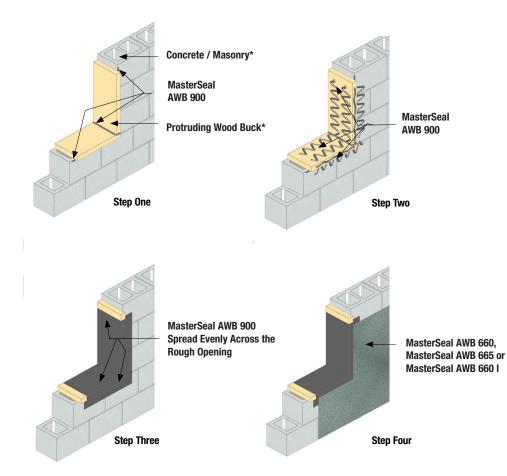


- Ensure that MasterSeal AWB 900 is uniformly applied at a 12-20 mil thickness.
- Extend MasterSeal AWB 900 at least 100 mm (4") onto the exterior wall, maintaining 12-20 mil thickness.
- Allow MasterSeal AWB 900 to skin before applying fluid-applied air/ water resistive barrier.
- Lap air/water-resistive barrier at least 50 mm (2") onto MasterSeal AWB 900, creating a continuous, monolithic air/ water resistive barrier

TYPICAL ROUGH OPENING TREATMENT WITH MASTERSEAL AWB 900 ON FRAMED CONSTRUCTION WITH A PROTRUDING BUCK

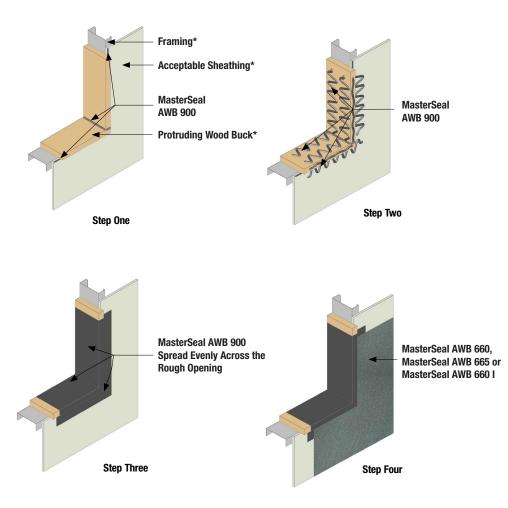

- Ensure that MasterSeal AWB 900 is uniformly applied at a 12-20 mil thickness.
- Extend MasterSeal AWB 900 at least 100 mm (4") onto the exterior wall, maintaining 12-20 mil thickness.
- Allow MasterSeal AWB 900 to skin before applying fluid-applied air/ water resistive barrier.
- Lap air/water-resistive barrier at least 50 mm (2") onto MasterSeal AWB 900, creating a continuous, monolithic air/ water resistive barrier


MasterSeal AWB 900 Liquid Flashing Membrane TYPICAL TERMINATION AT GRADE

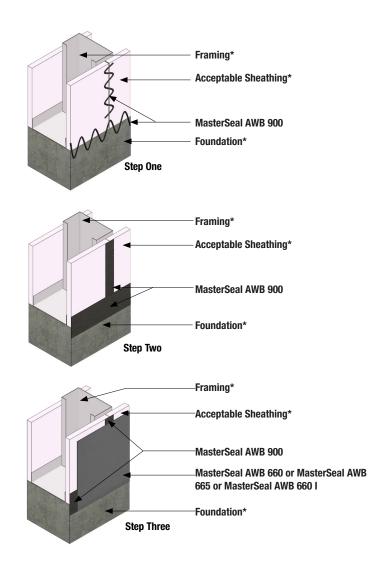


- Ensure that MasterSeal AWB 900 is applied at a 20 mil thickness.
- Extend MasterSeal AWB 900 at least 25 mm (1") on either side of foundation joints.
- Allow MasterSeal AWB 900 to skin before applying fluid-applied air/water resistive barrier.

MasterSeal AWB 900 Liquid Flashing Membrane TYPICAL PIPE PENETRATION

• Maximum 1/2" gap at penetrations.

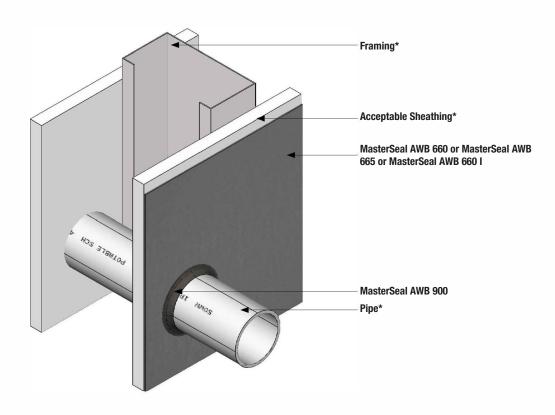


MasterSeal AWB 900 Liquid Flashing Membrane TYPICAL SHEATHING JOINT - INSIDE CORNER

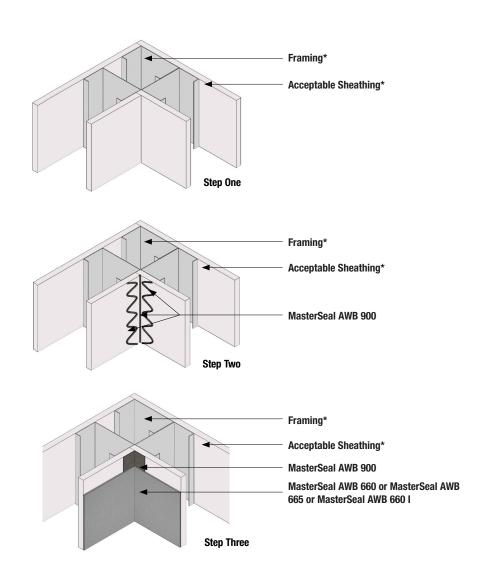

- Ensure that MasterSeal AWB 900 is applied at a 20 mil thickness.
- Extend MasterSeal AWB 900 at least 25 mm (1") on either side of foundation joints.
- Allow MasterSeal AWB 900 to skin before applying fluid-applied air/water resistive barrier.

MasterSeal AWB 900 Liquid Flashing Membrane TYPICAL SHEATHING JOINT - OUTSIDE CORNER

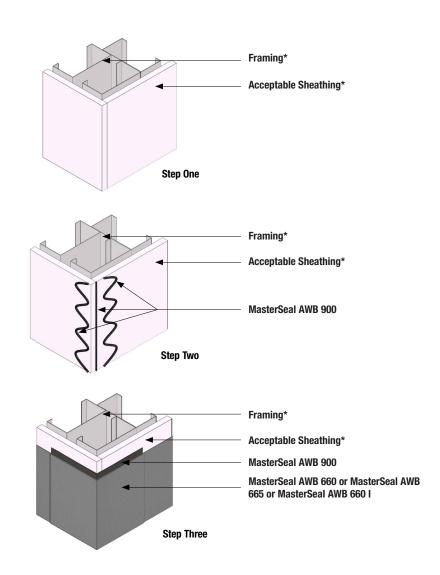

- Ensure that MasterSeal AWB 900 is applied at a 20 mil thickness.
- Extend MasterSeal AWB 900 at least 25 mm (1") on either side of foundation joints.
- Allow MasterSeal AWB 900 to skin before applying fluid-applied air/water resistive barrier.

HEALTH, SAFETY AND ENVIRONMENTAL

Read, understand and follow all Safety Data Sheets and product label information for this product prior to use. The SDS can be obtained by visiting www. master-builders-solutions.basf.us, e-mailing your request to basfbscst@basf.com or calling 1(800) 433-9517. Use only as directed. For medical emergencies only, call ChemTrec[®] 1(800)424-9300.

LIMITED WARRANTY NOTICE

BASF warrants this product to be free from manufacturing defects and to meet the technical properties on the current Technical Data Guide, if used as directed within shelf life. Satisfactory results depend not only on quality products but also upon many factors beyond our control. BASF MAKES NO OTHER WARRANTY OR GUARANTEE, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MER-CHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE WITH RESPECT TO ITS PRODUCTS. The sole and exclusive remedy of Purchaser for any claim concerning this product, including but not limited to, claims alleging breach of warranty, negligence, strict liability or otherwise, is the replacement of product or refund of the purchase price, at the sole option of BASF. Any claims concerning this product must be received in writing within one (1) year from the date of shipment and any claims not presented within that period are waived by Purchaser. BASF WILL NOT BE RESPONSIBLE FOR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL (INCLUDING LOST PROFITS) OR PUNITIVE DAMAGES OF ANY KIND.

Purchaser must determine the suitability of the products for the intended use and assumes all risks and liabilities in connection therewith. This information and all further technical advice are based on BASF's present knowledge and experience. However, BASF assumes no liability for providing such information and advice including the extent to which such information and advice may relate to existing third party intellectual property rights, especially patent rights, nor shall any legal relationship be created by or arise from the provision of such information and advice. BASF reserves the right to make any changes according to technological progress or further developments. The Purchaser of the Product(s) must test the product(s) for suitability for the intended application and purpose before proceeding with a full application of the product(s). Performance of the product described herein should be verified by testing and carried out by qualified experts.

BASF Corporation Construction Systems

889 Valley Park Drive, Shakopee, MN 55379 www.master-builders-solutions.basf.us

Customer Service 1(800) 433.9517 **Technical Service** 1(800) 243.6739

